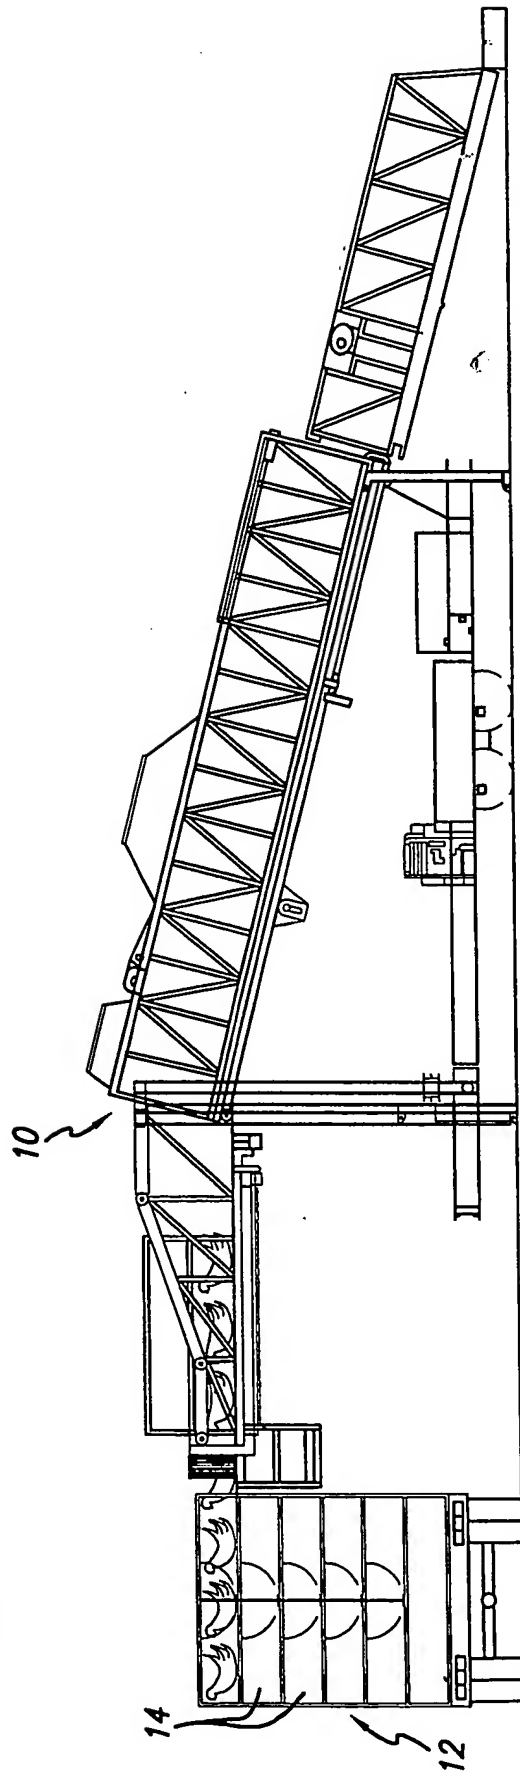


FIG. 1



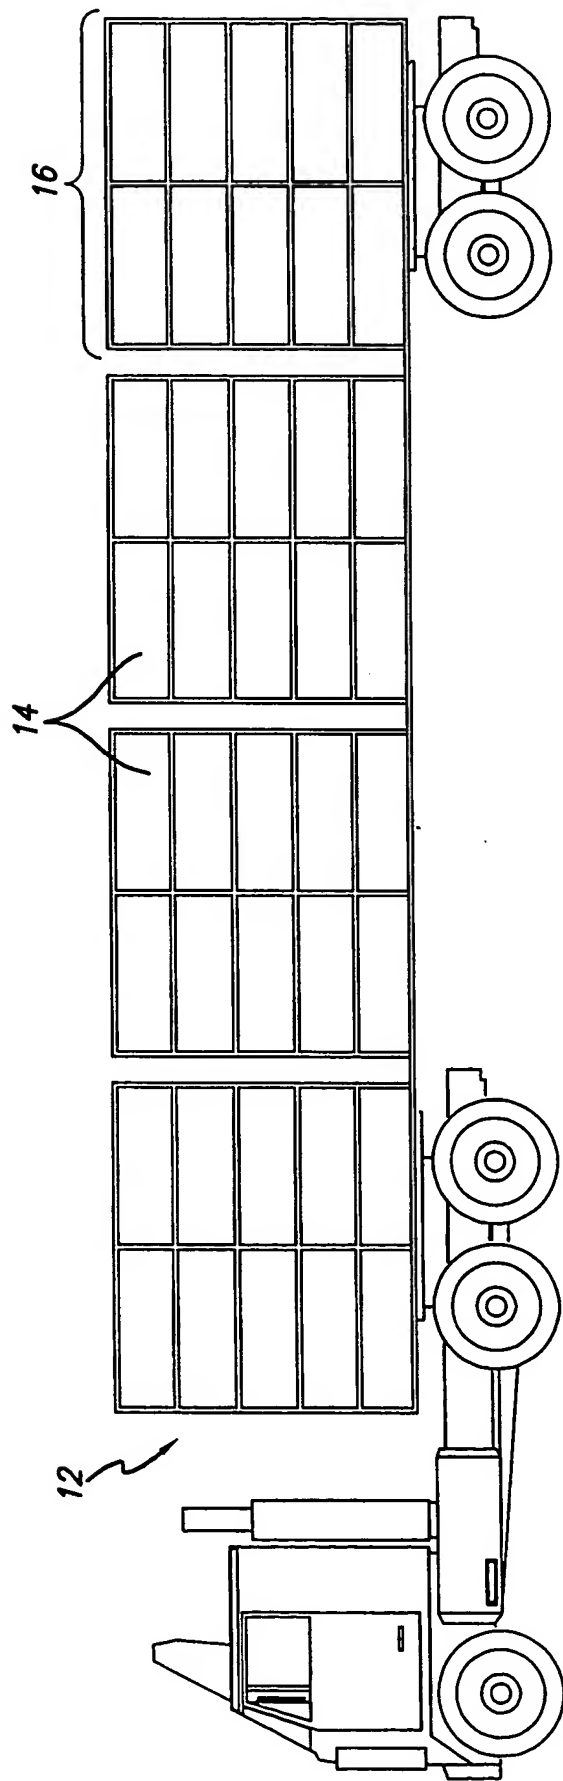


FIG. 2

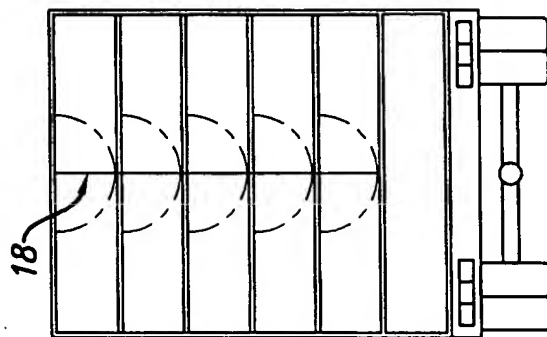


FIG. 3

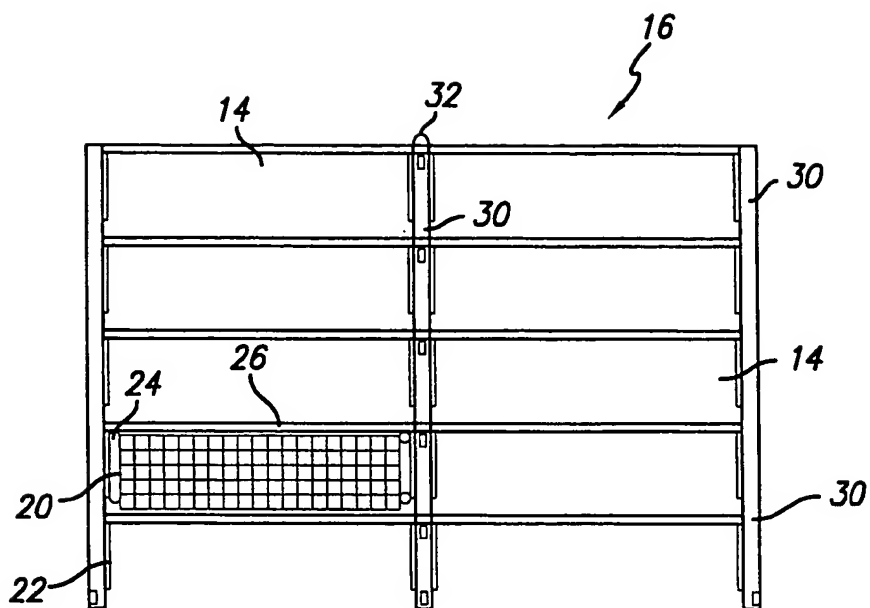


FIG. 4

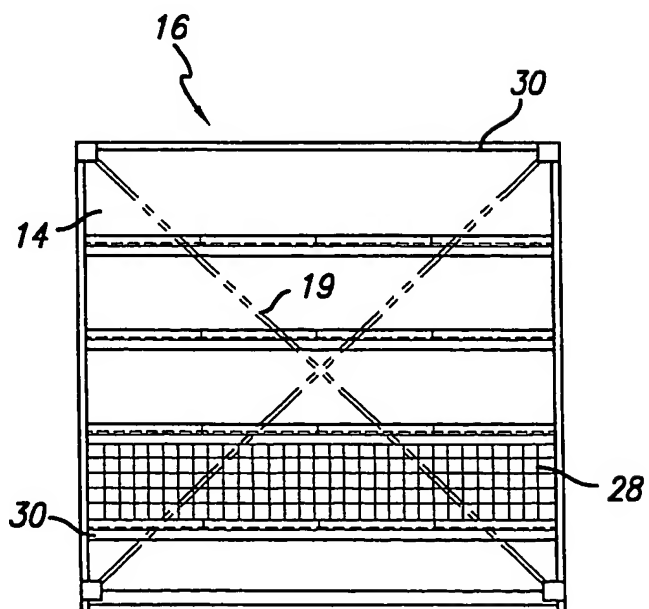
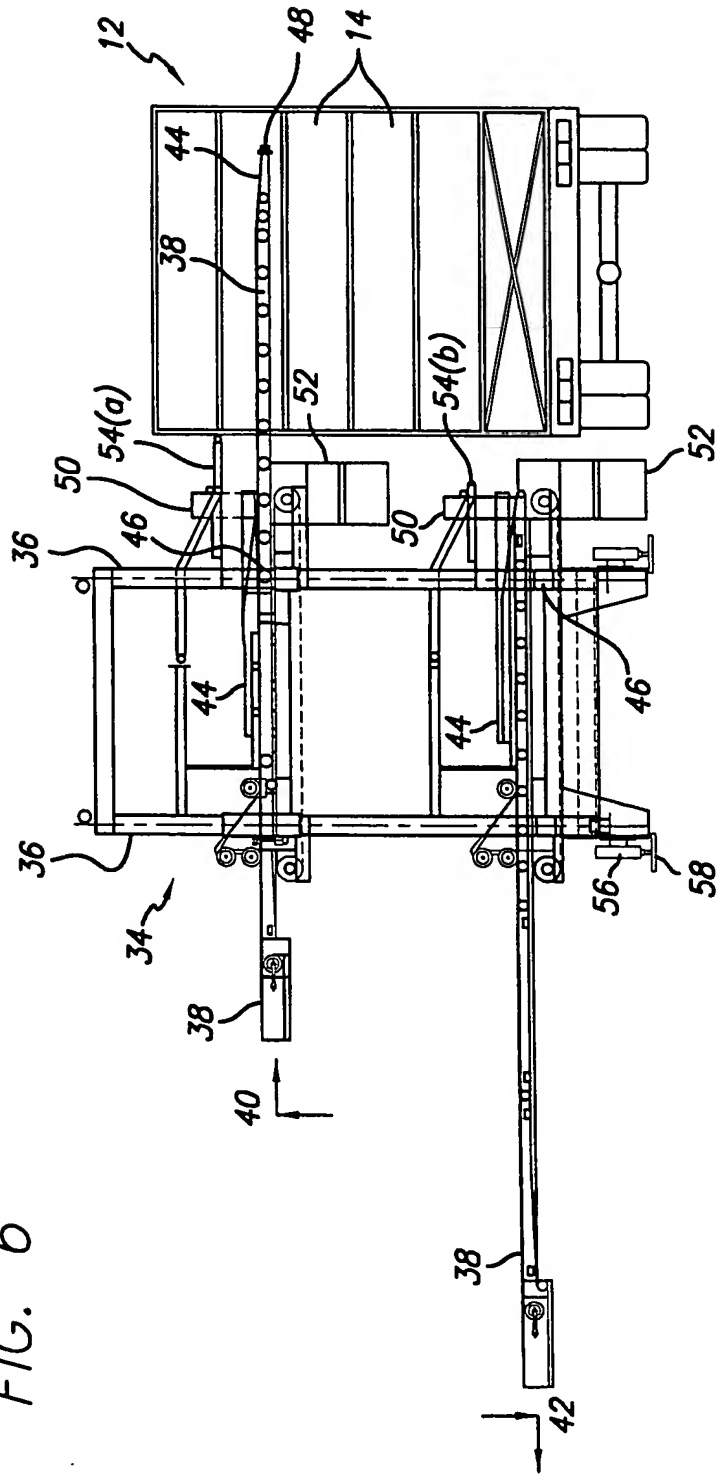


FIG. 5

FIG. 6



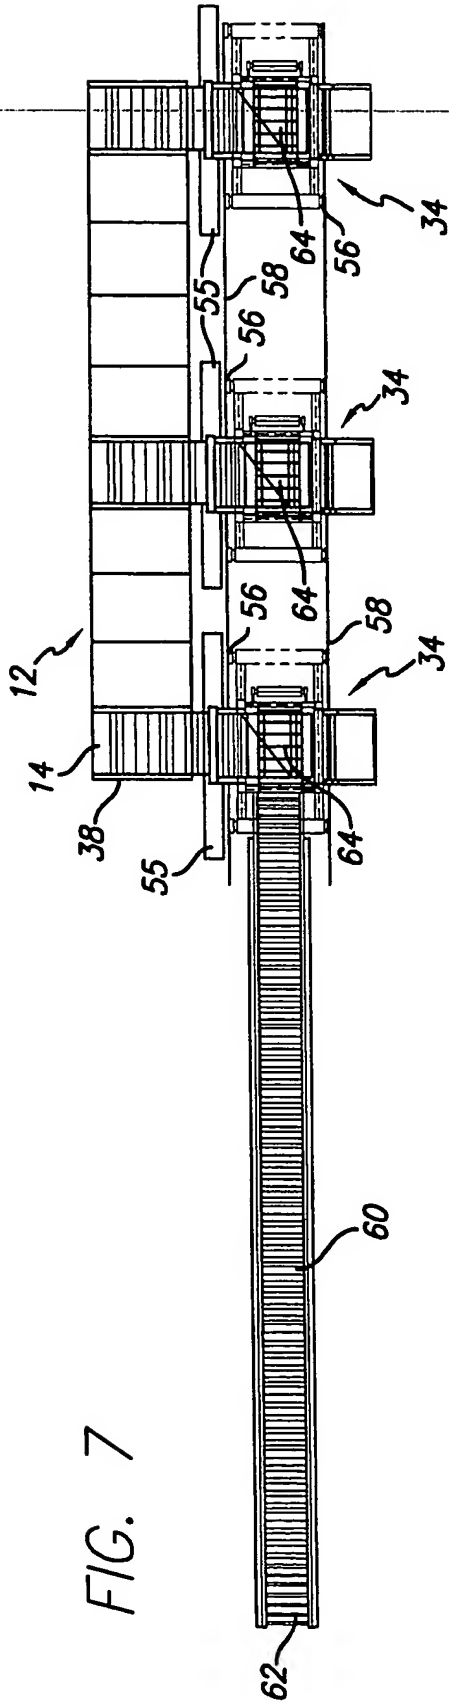


FIG. 7

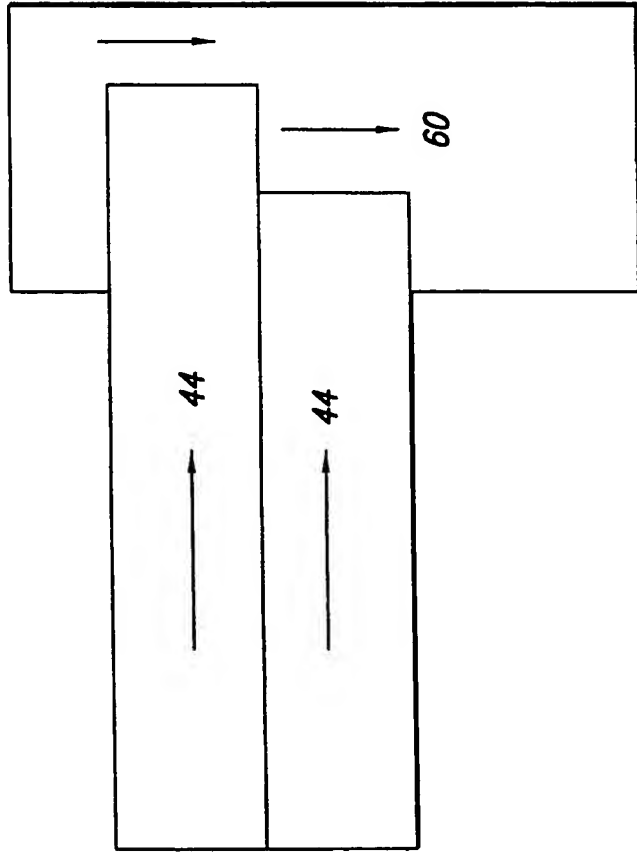
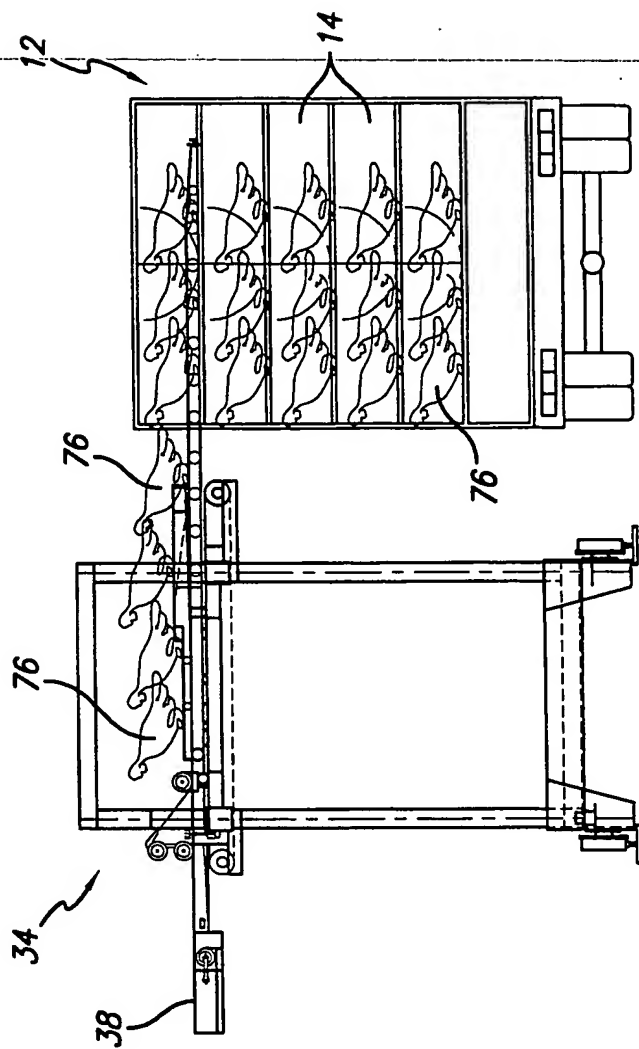
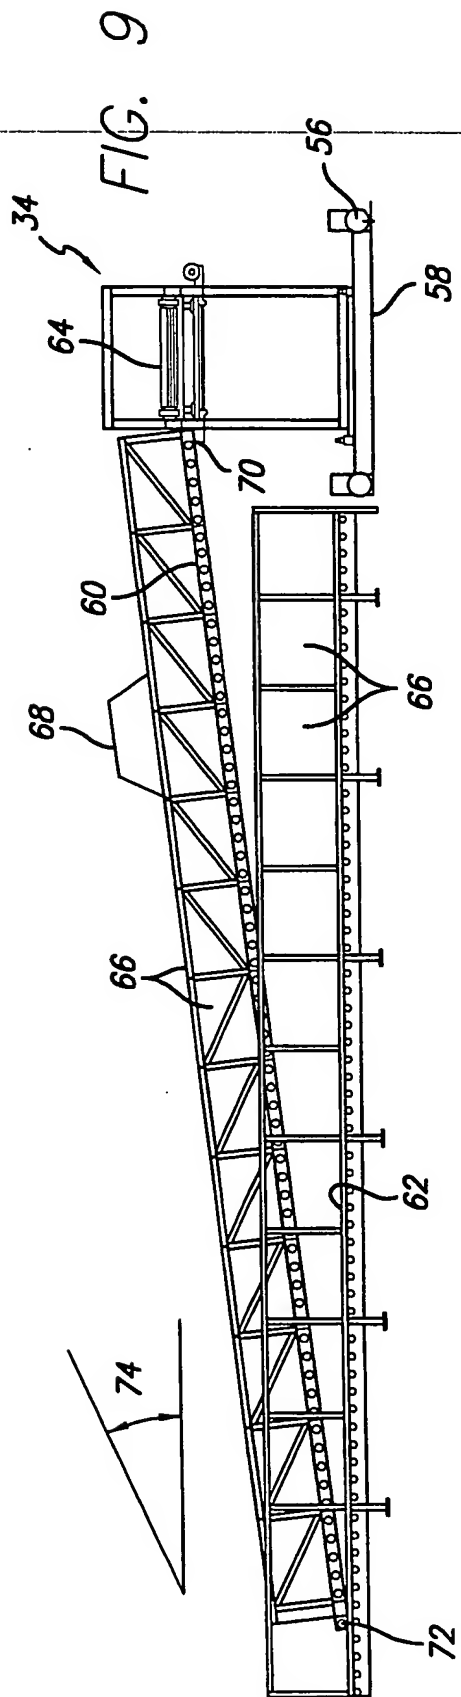


FIG. 8



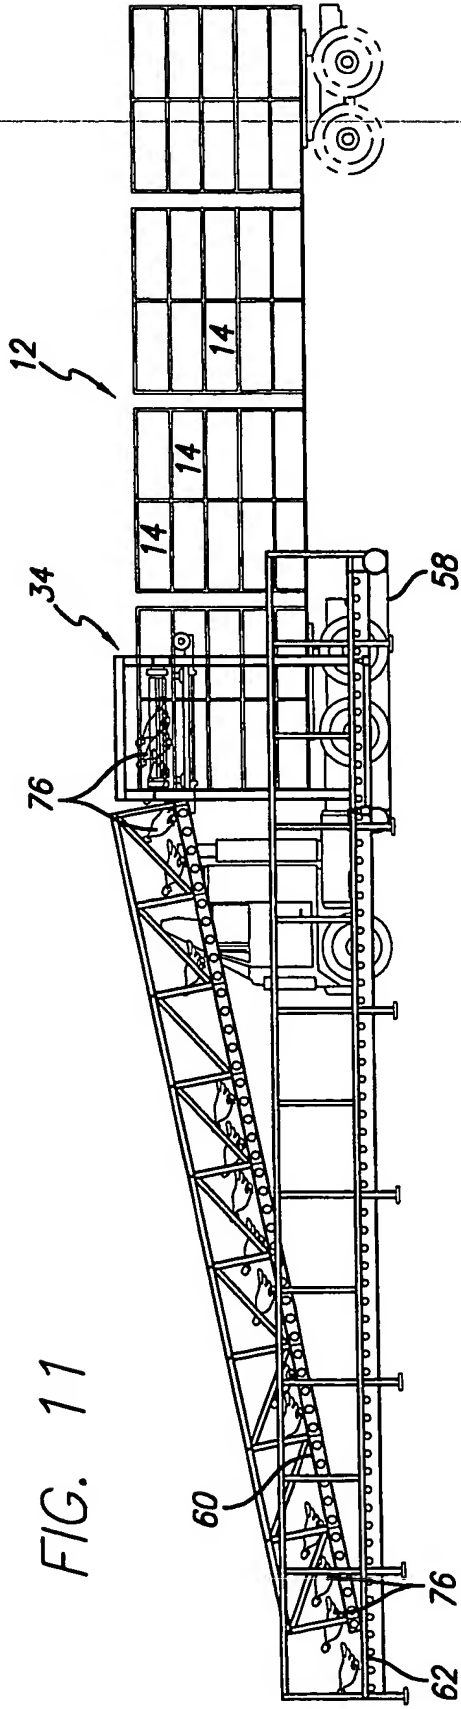
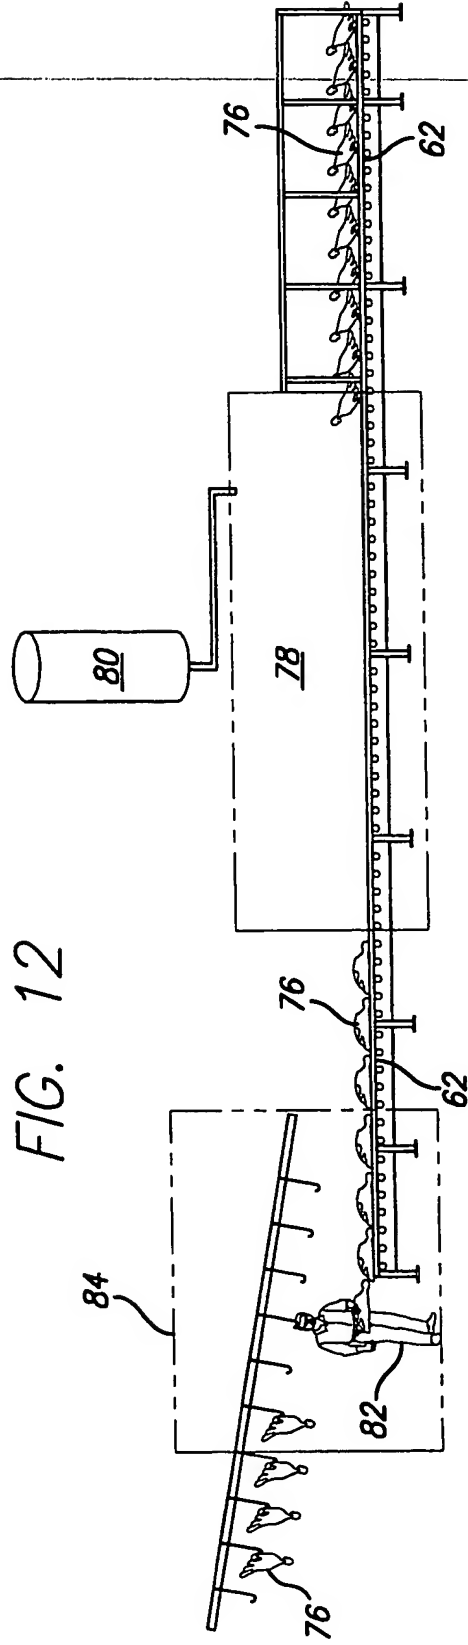


FIG. 12



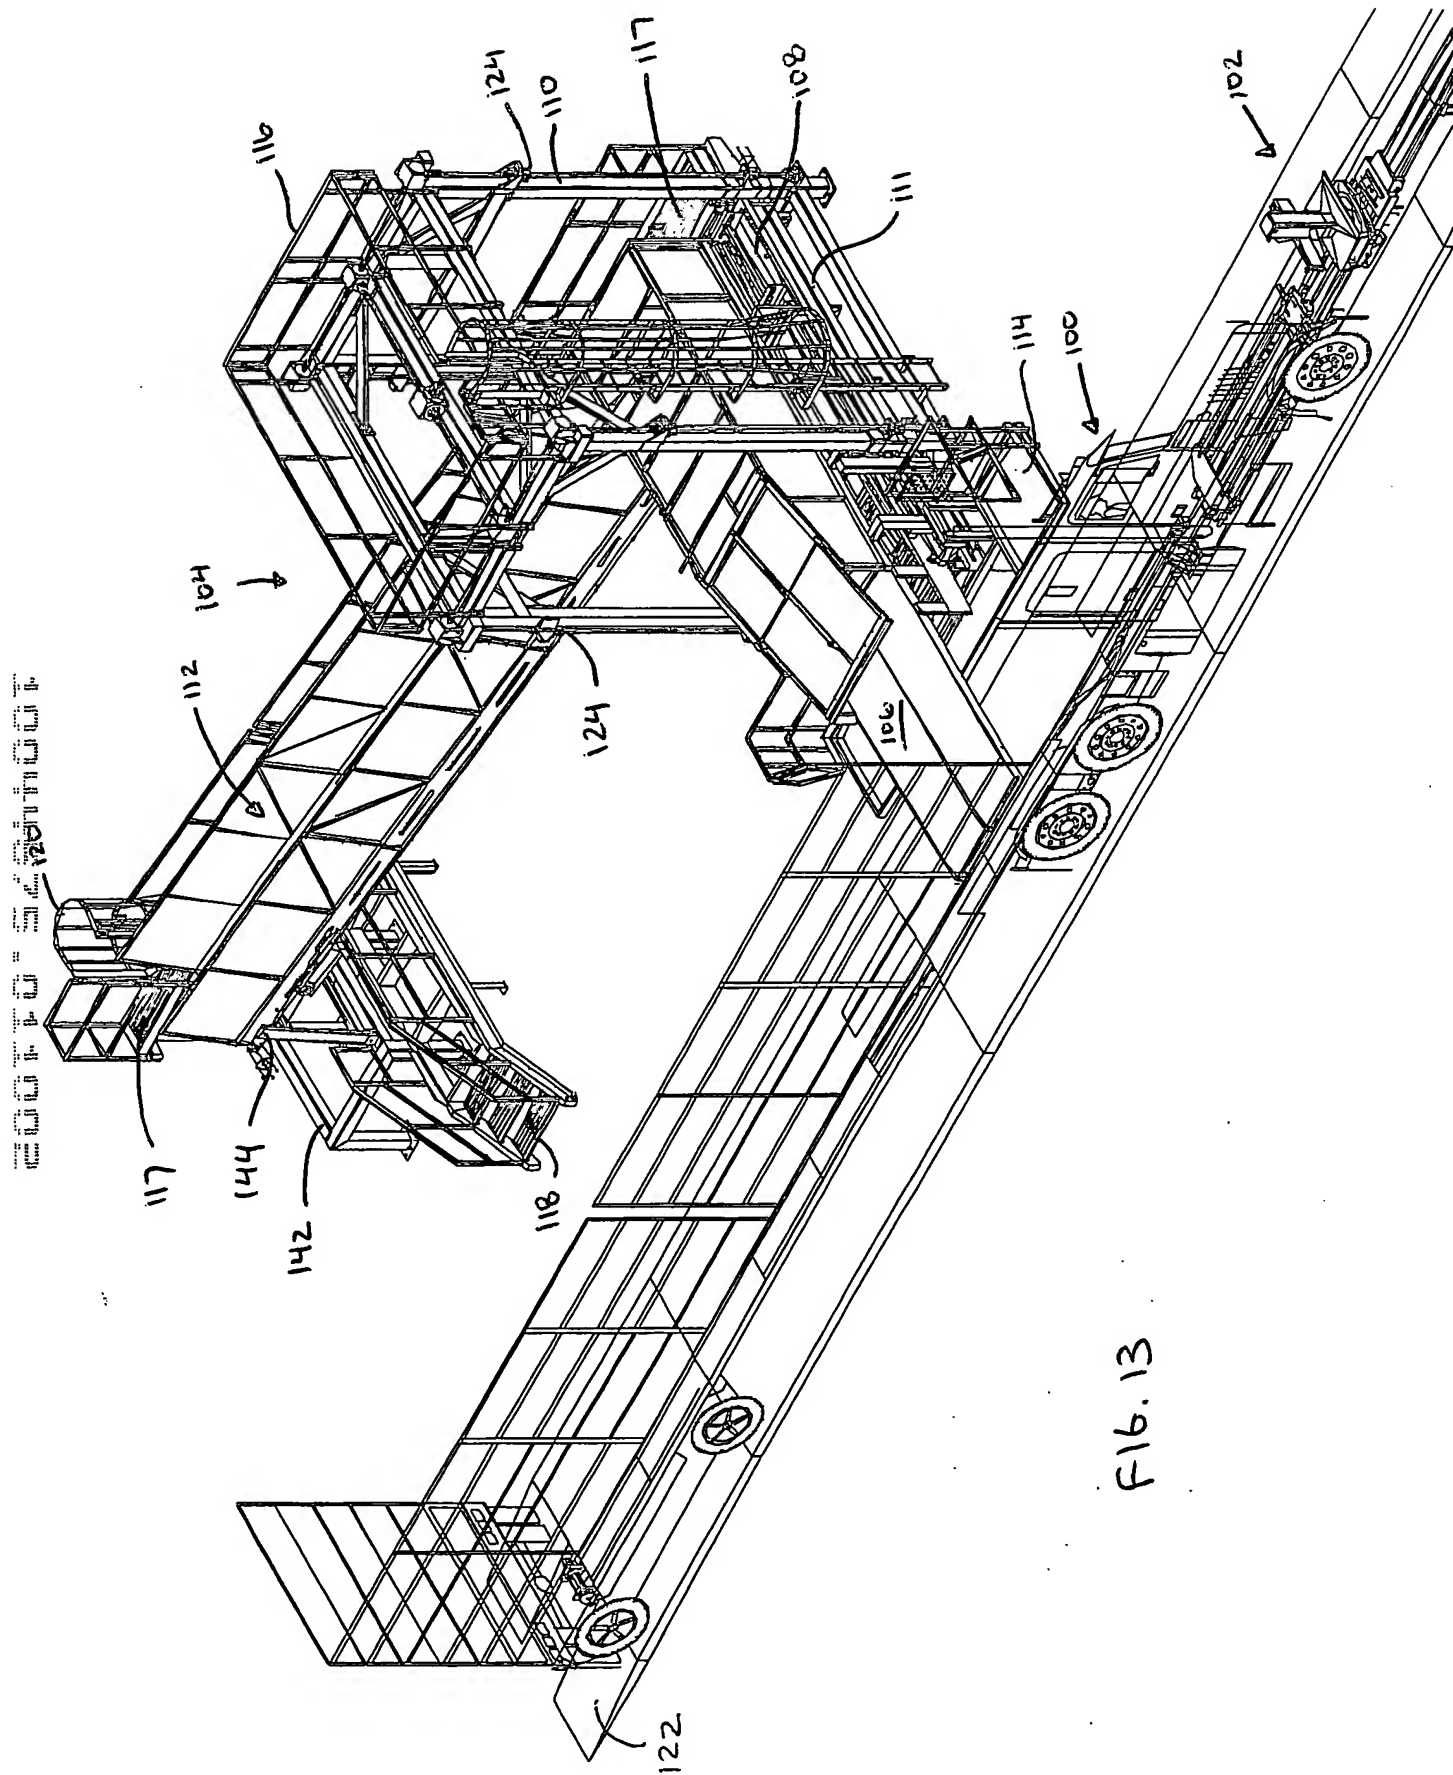


FIG. 13

102



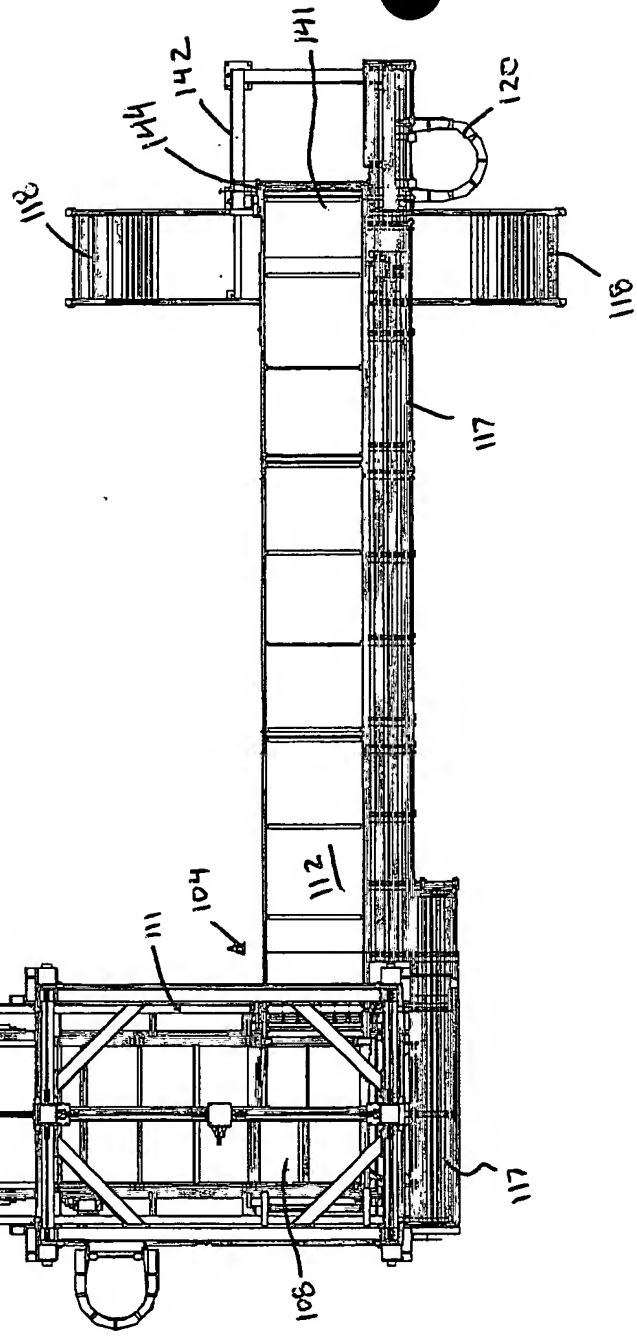



FIG. 14

FIG. 15a

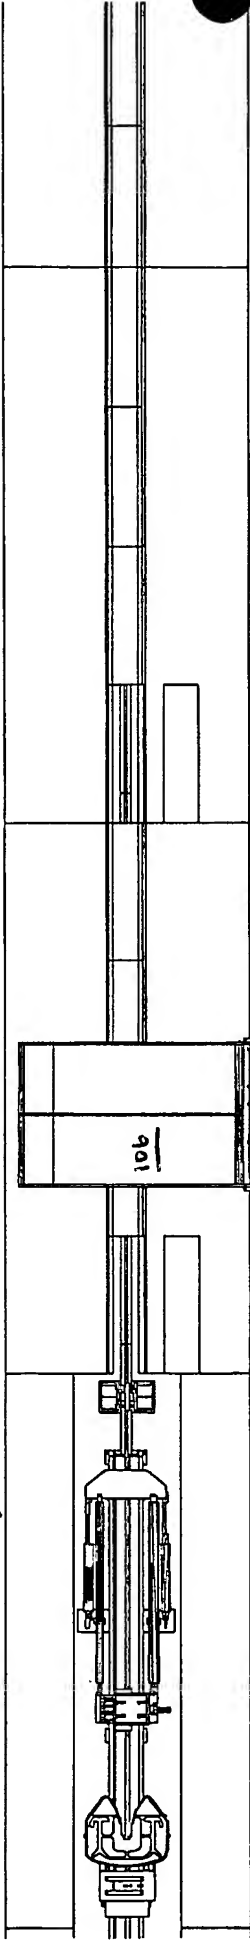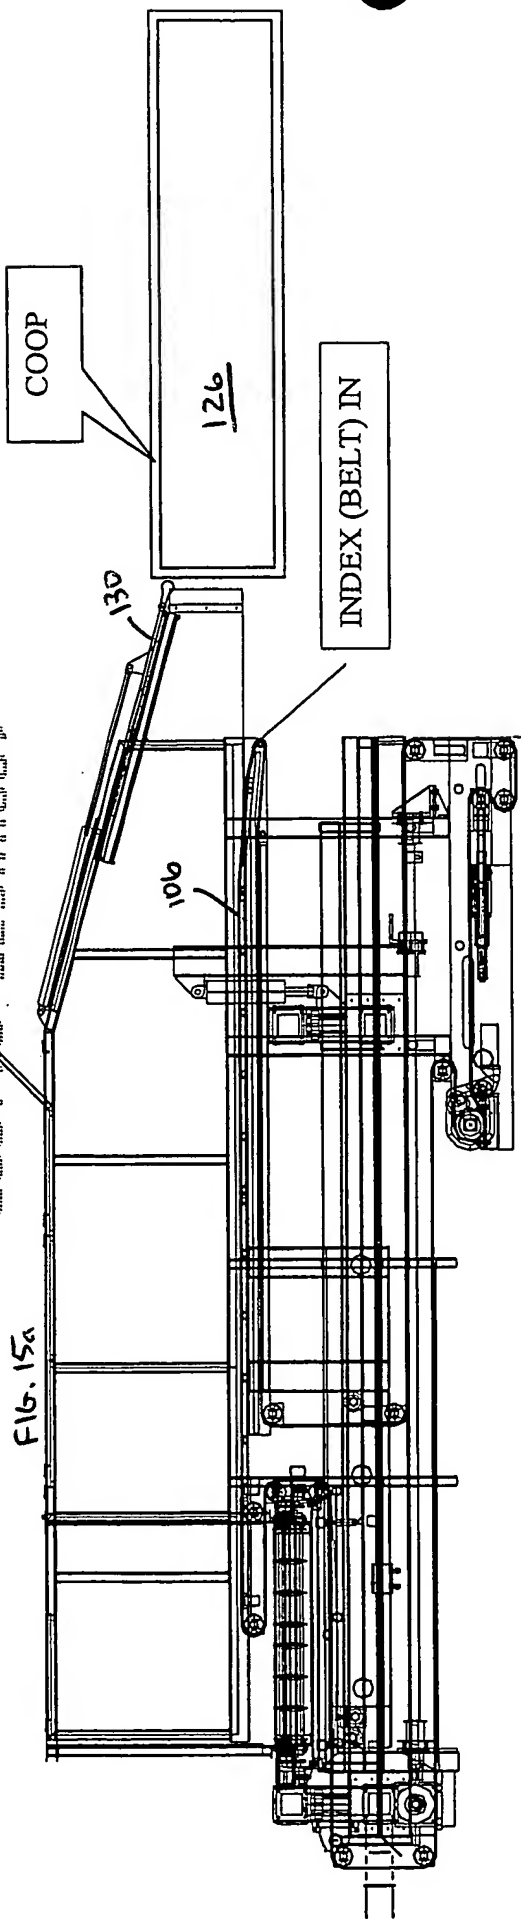


BELT IN

FIG. 15b

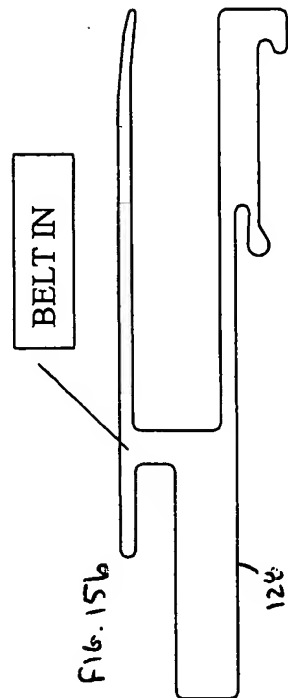

BELT OUT

FIG. 16b

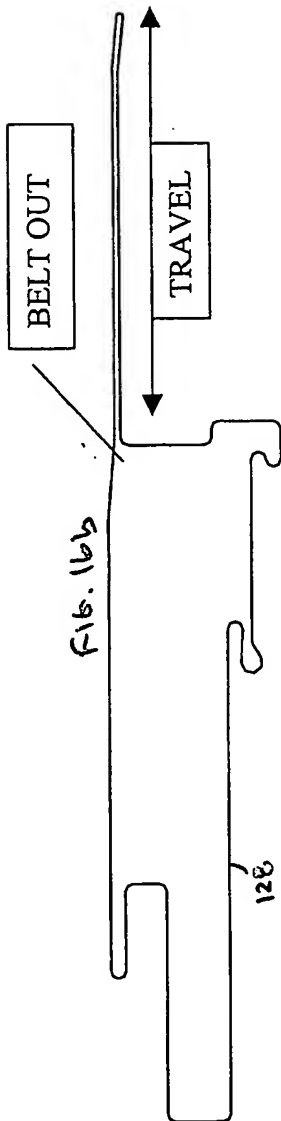

COOP

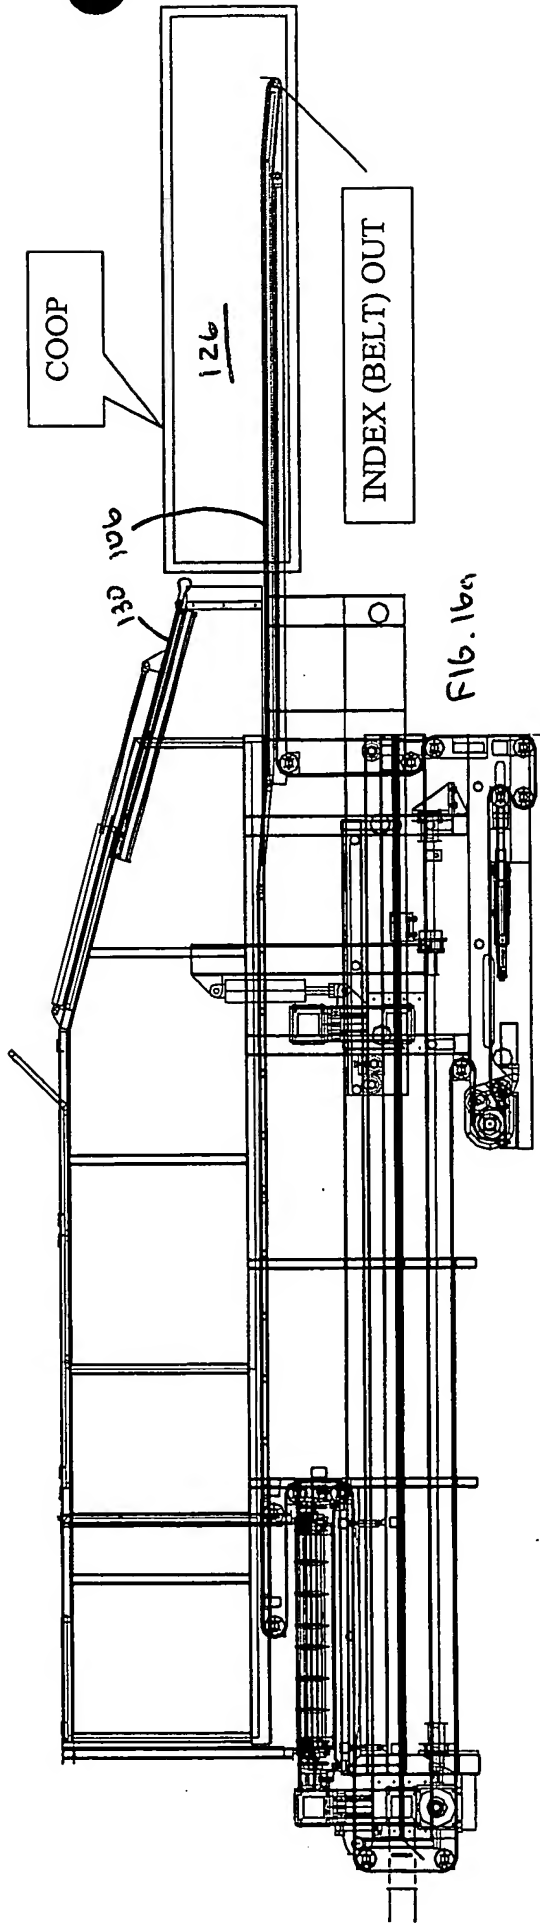
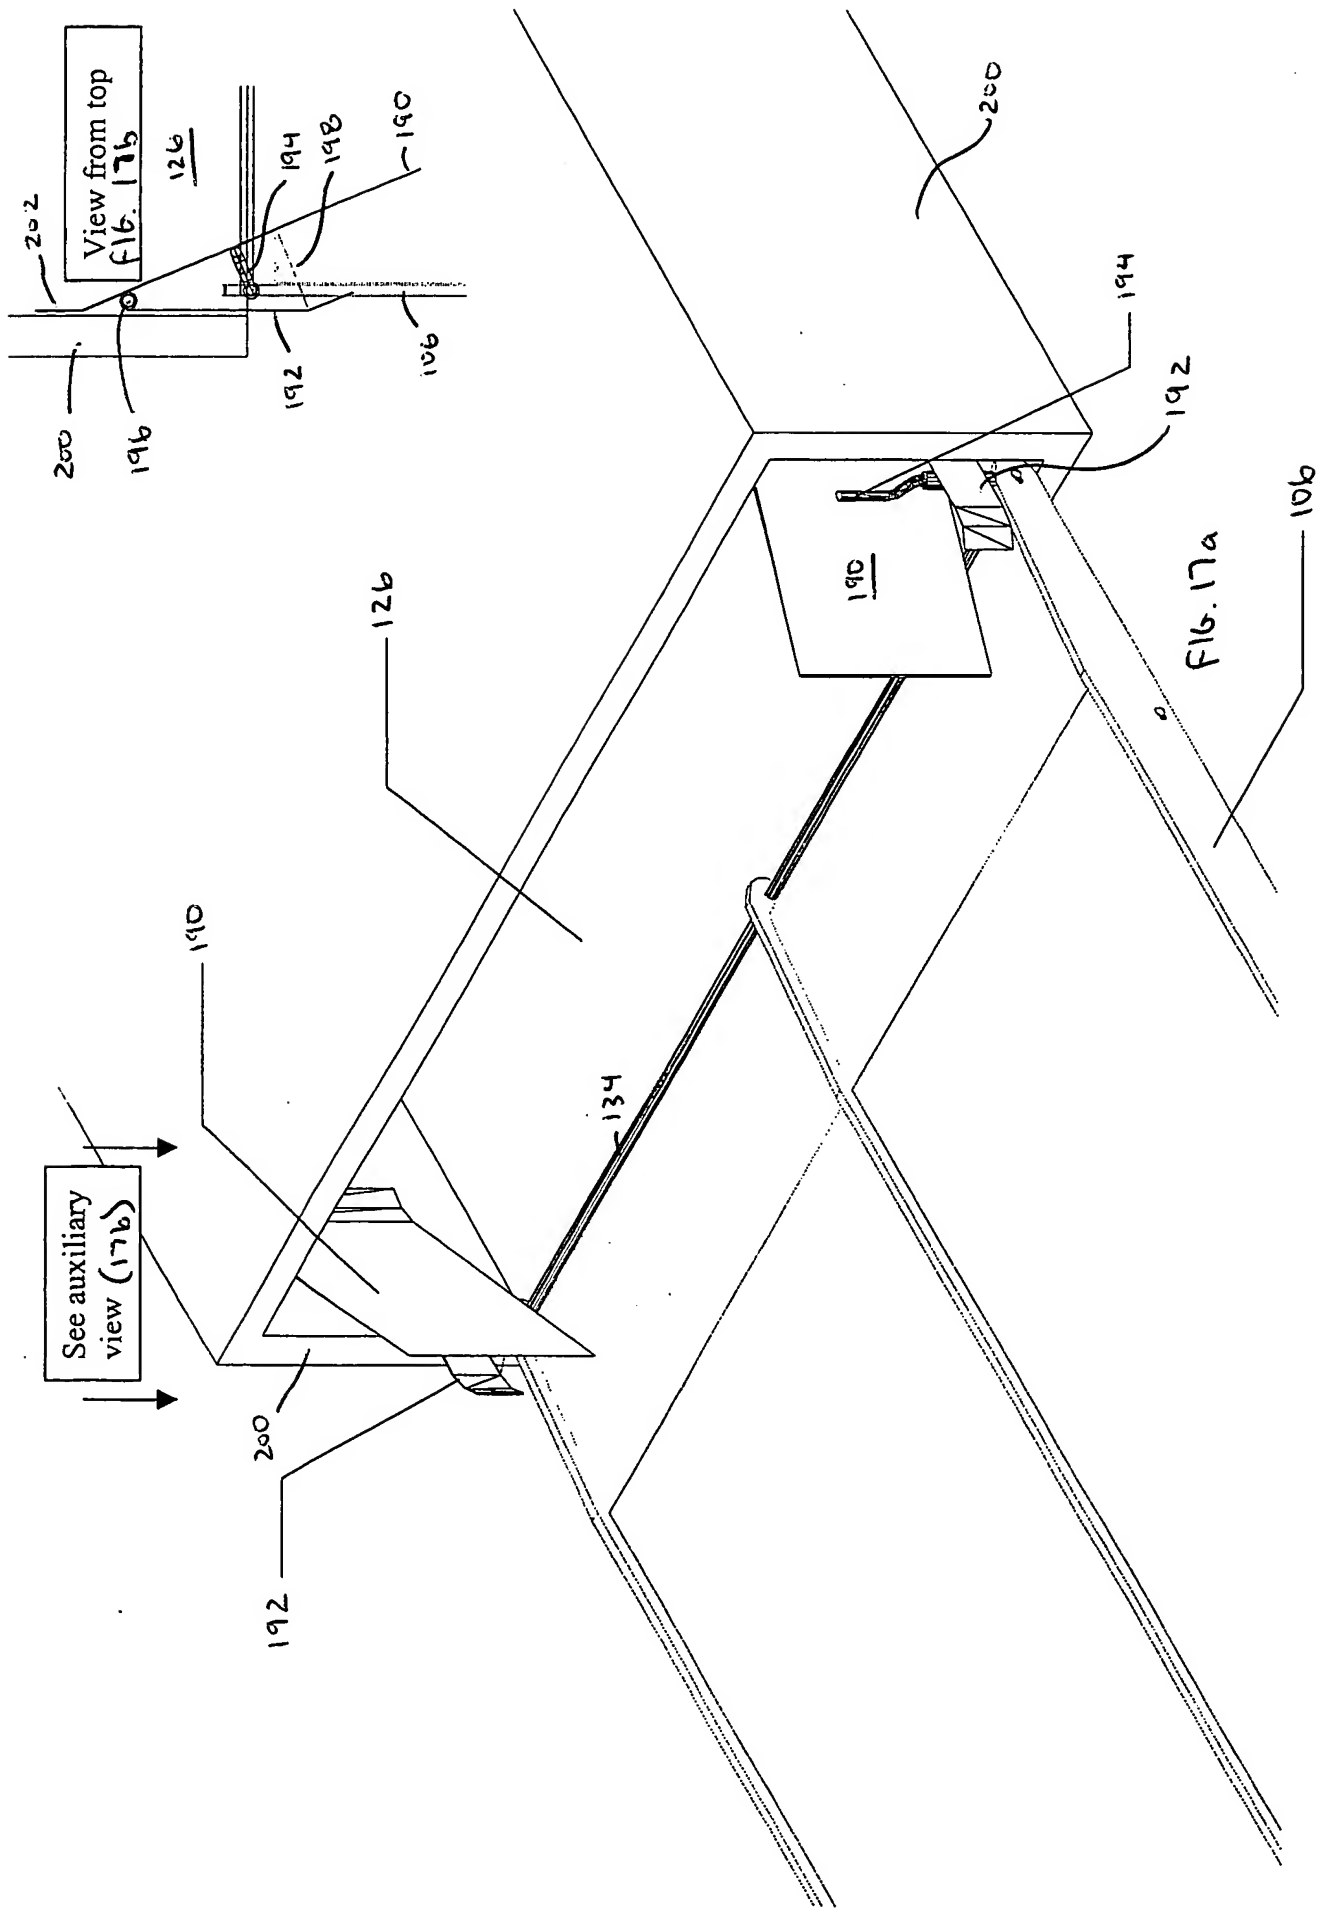


FIG. 16a



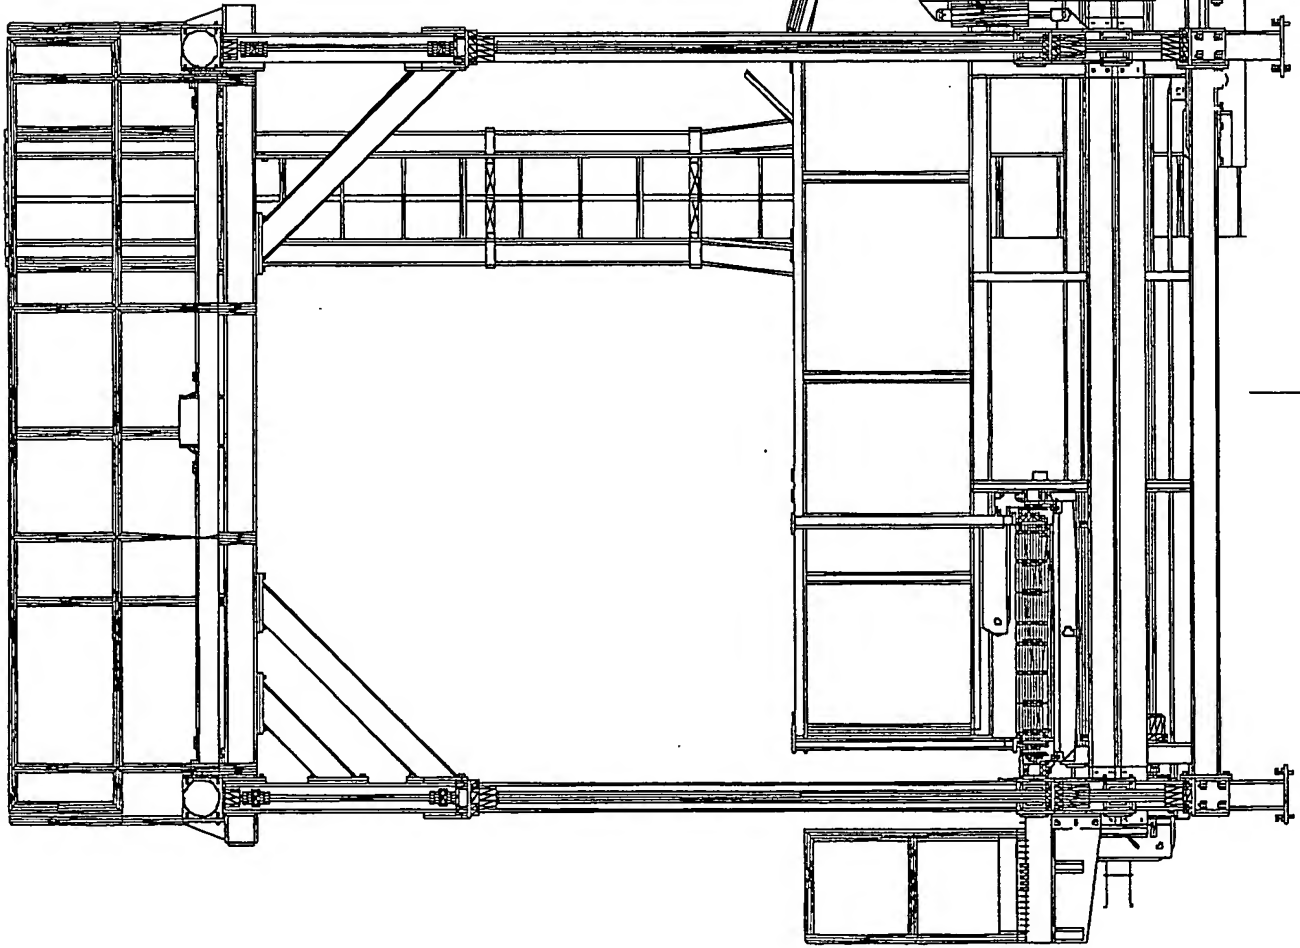


FIG. 18

102

132

134

106

126

134

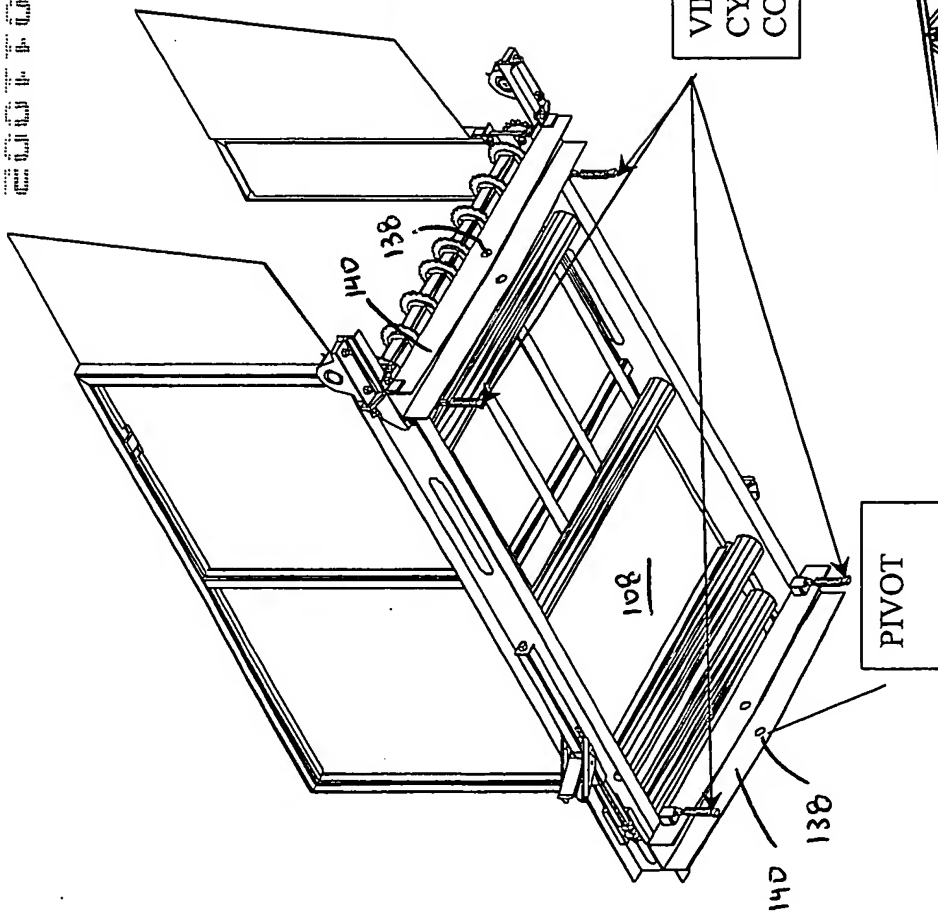


FIG. 19b

VIEW OF LEVELING
CYLINDERS FROM UNDER
CONVEYOR

112

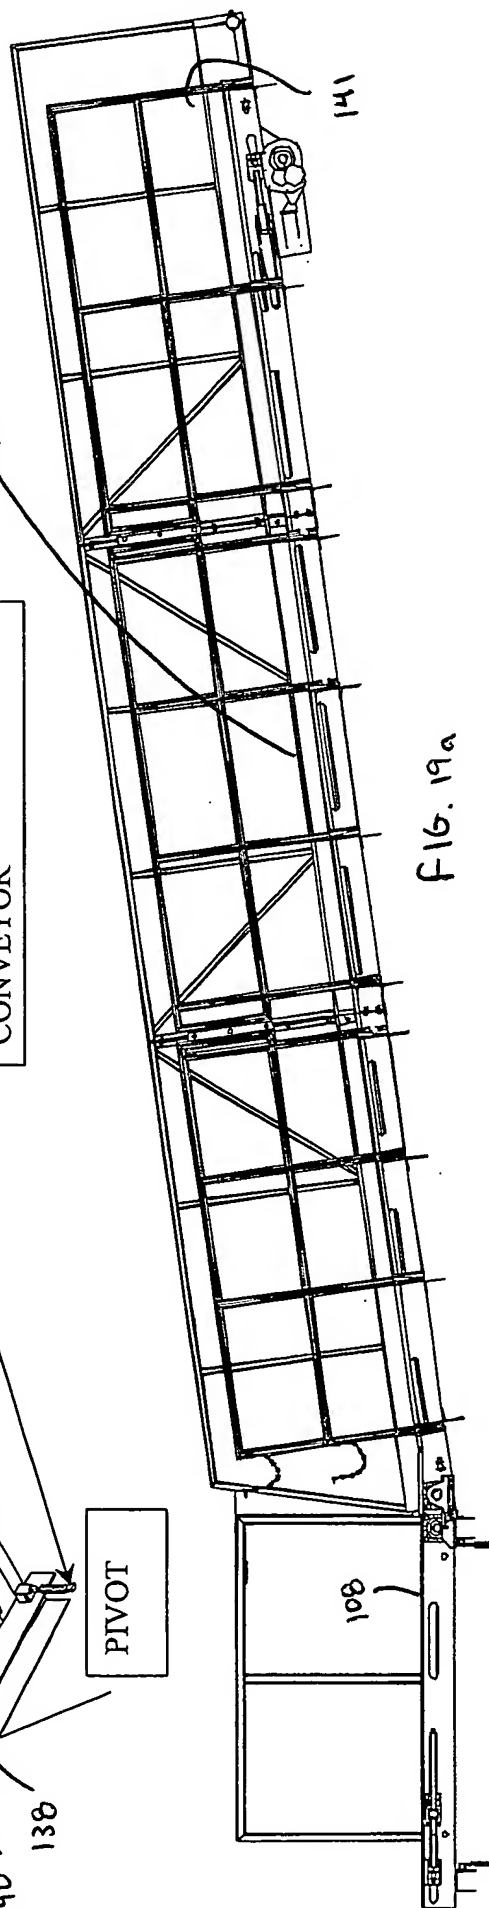


FIG. 20

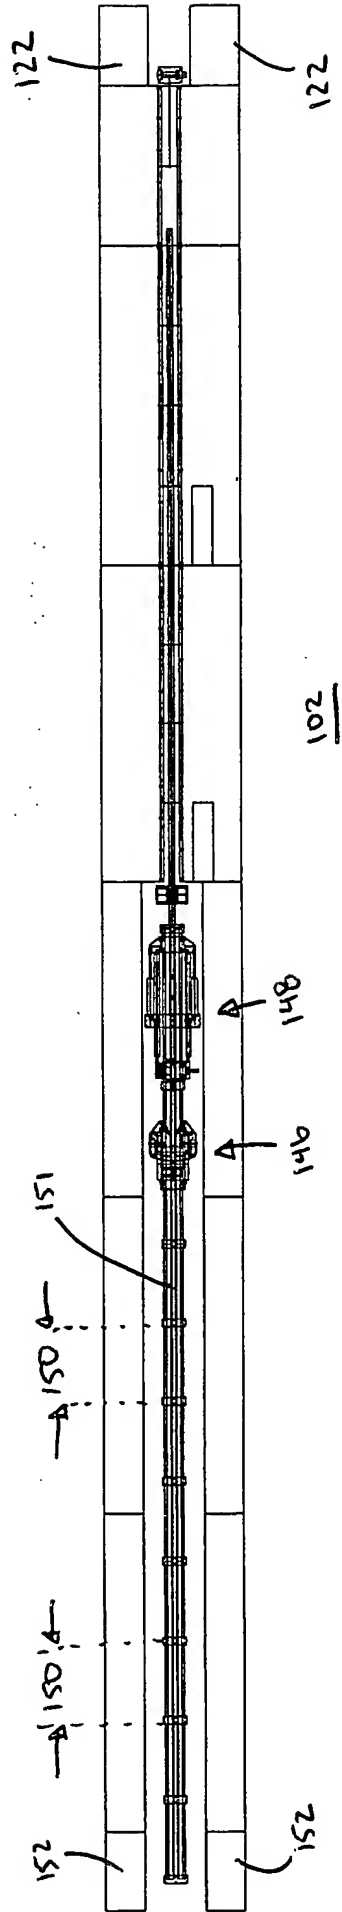
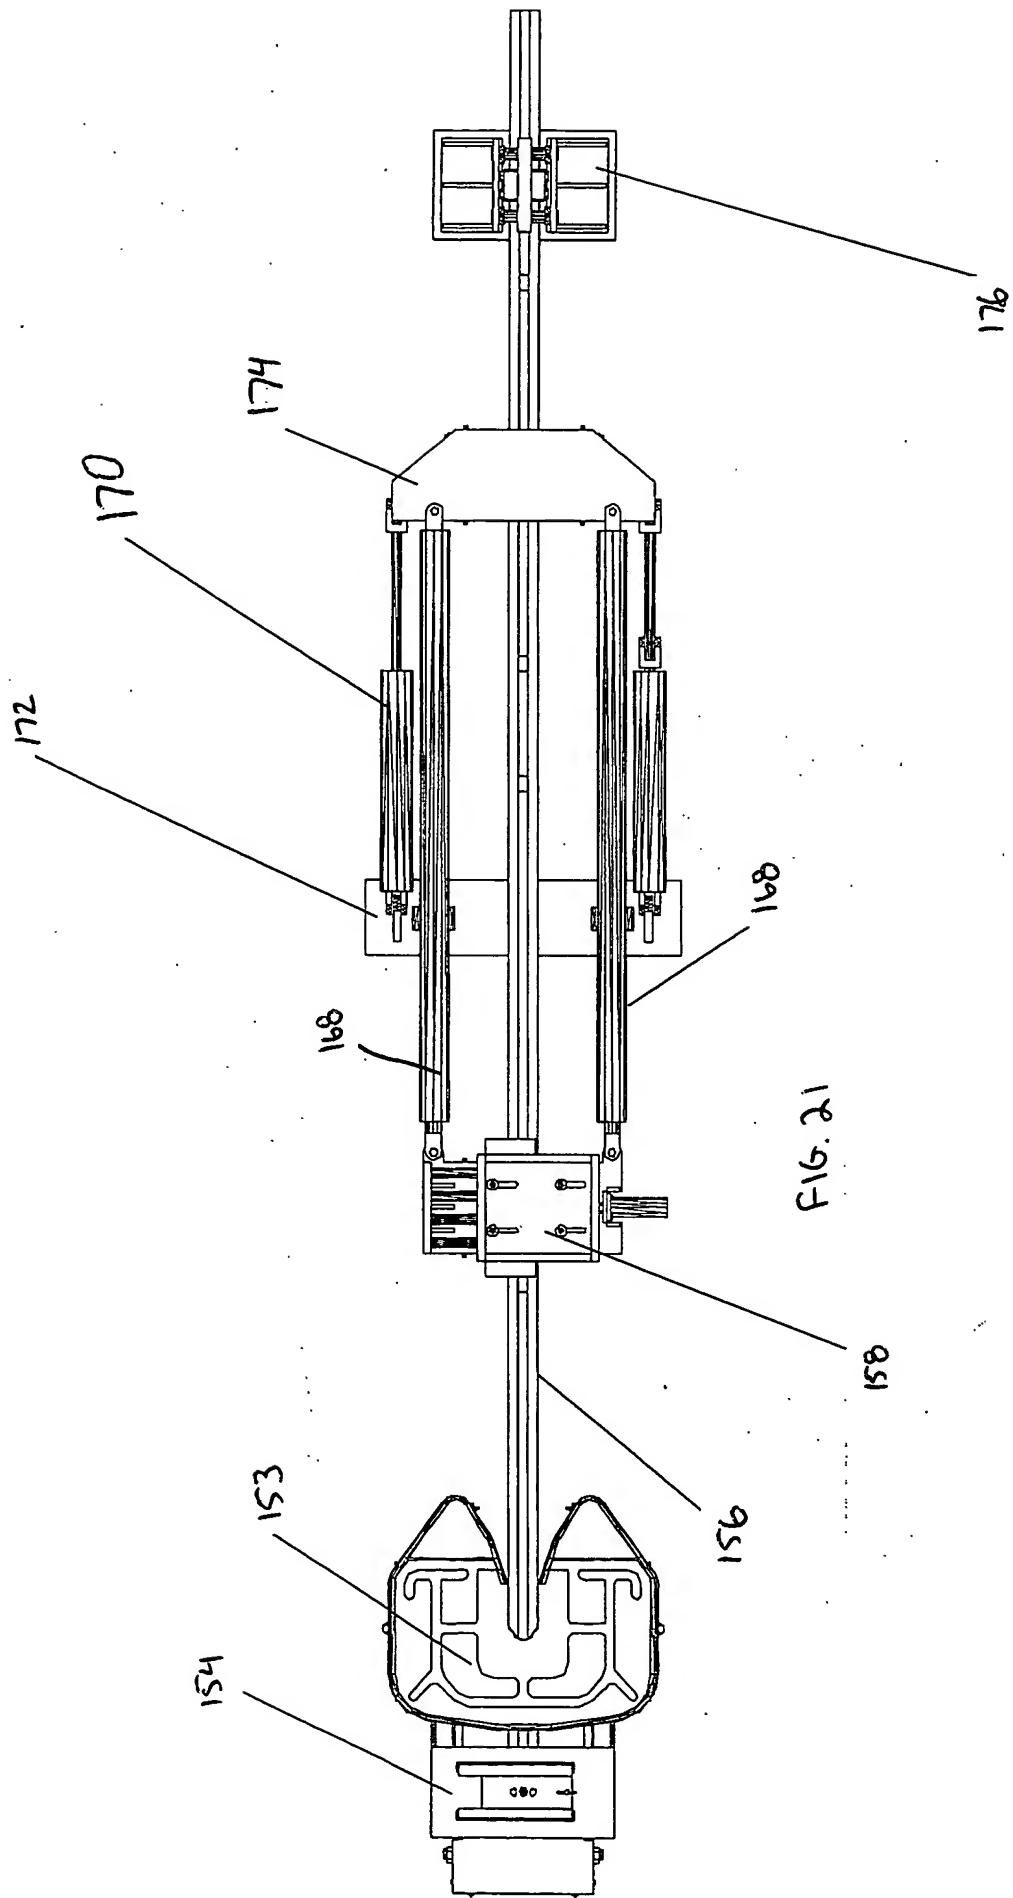


FIG. 21



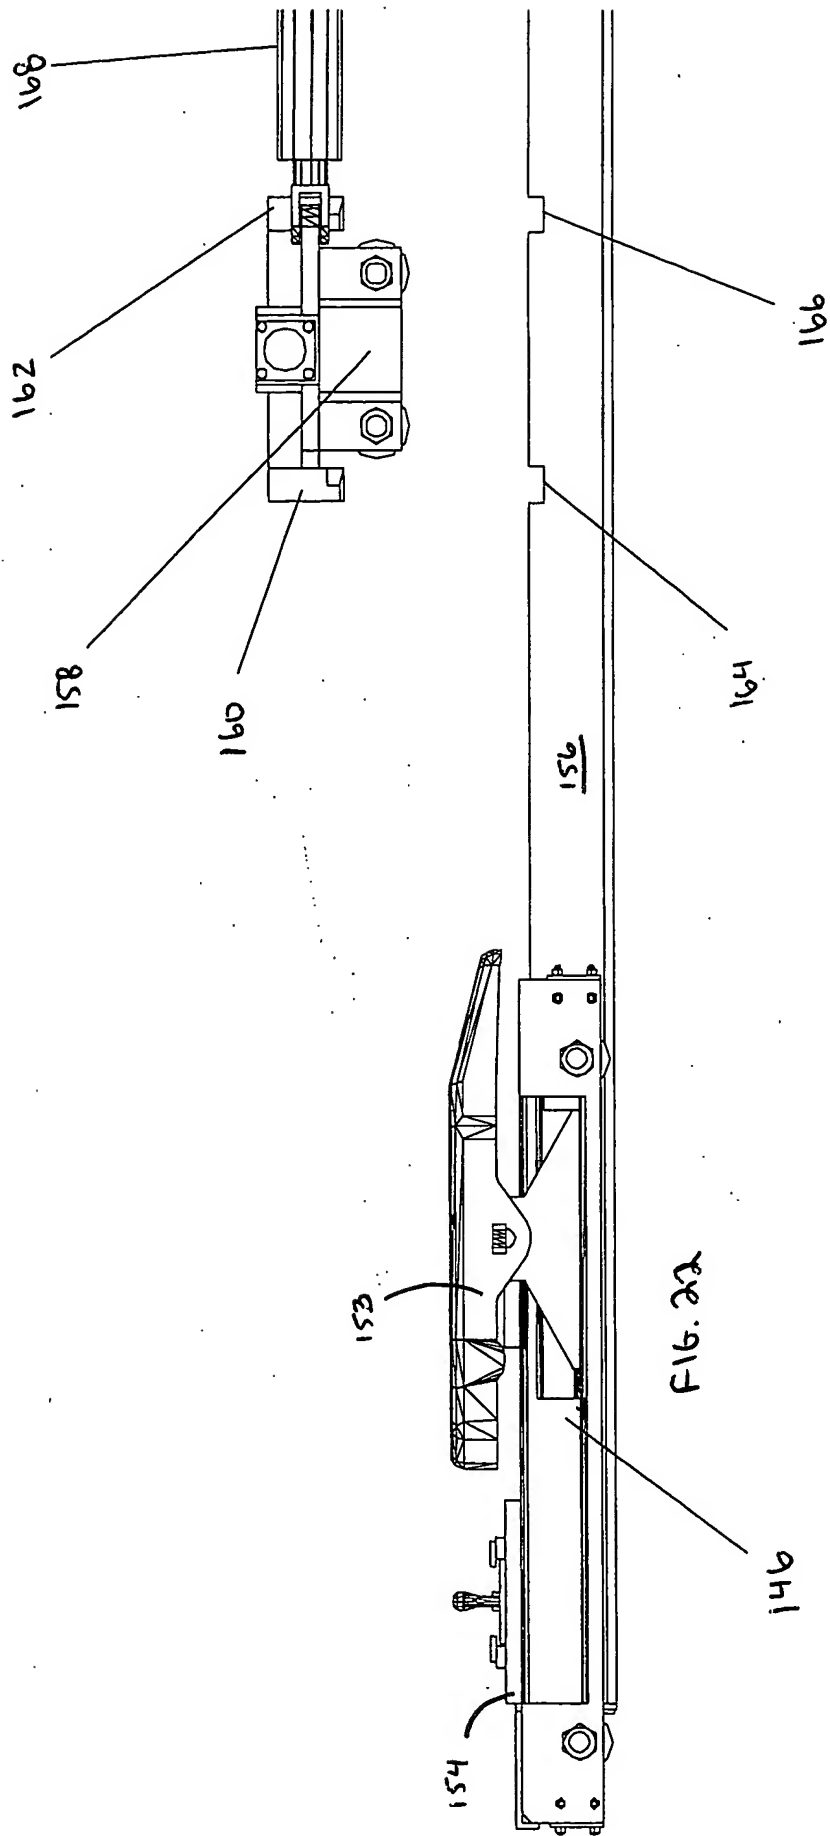


FIG. 23a

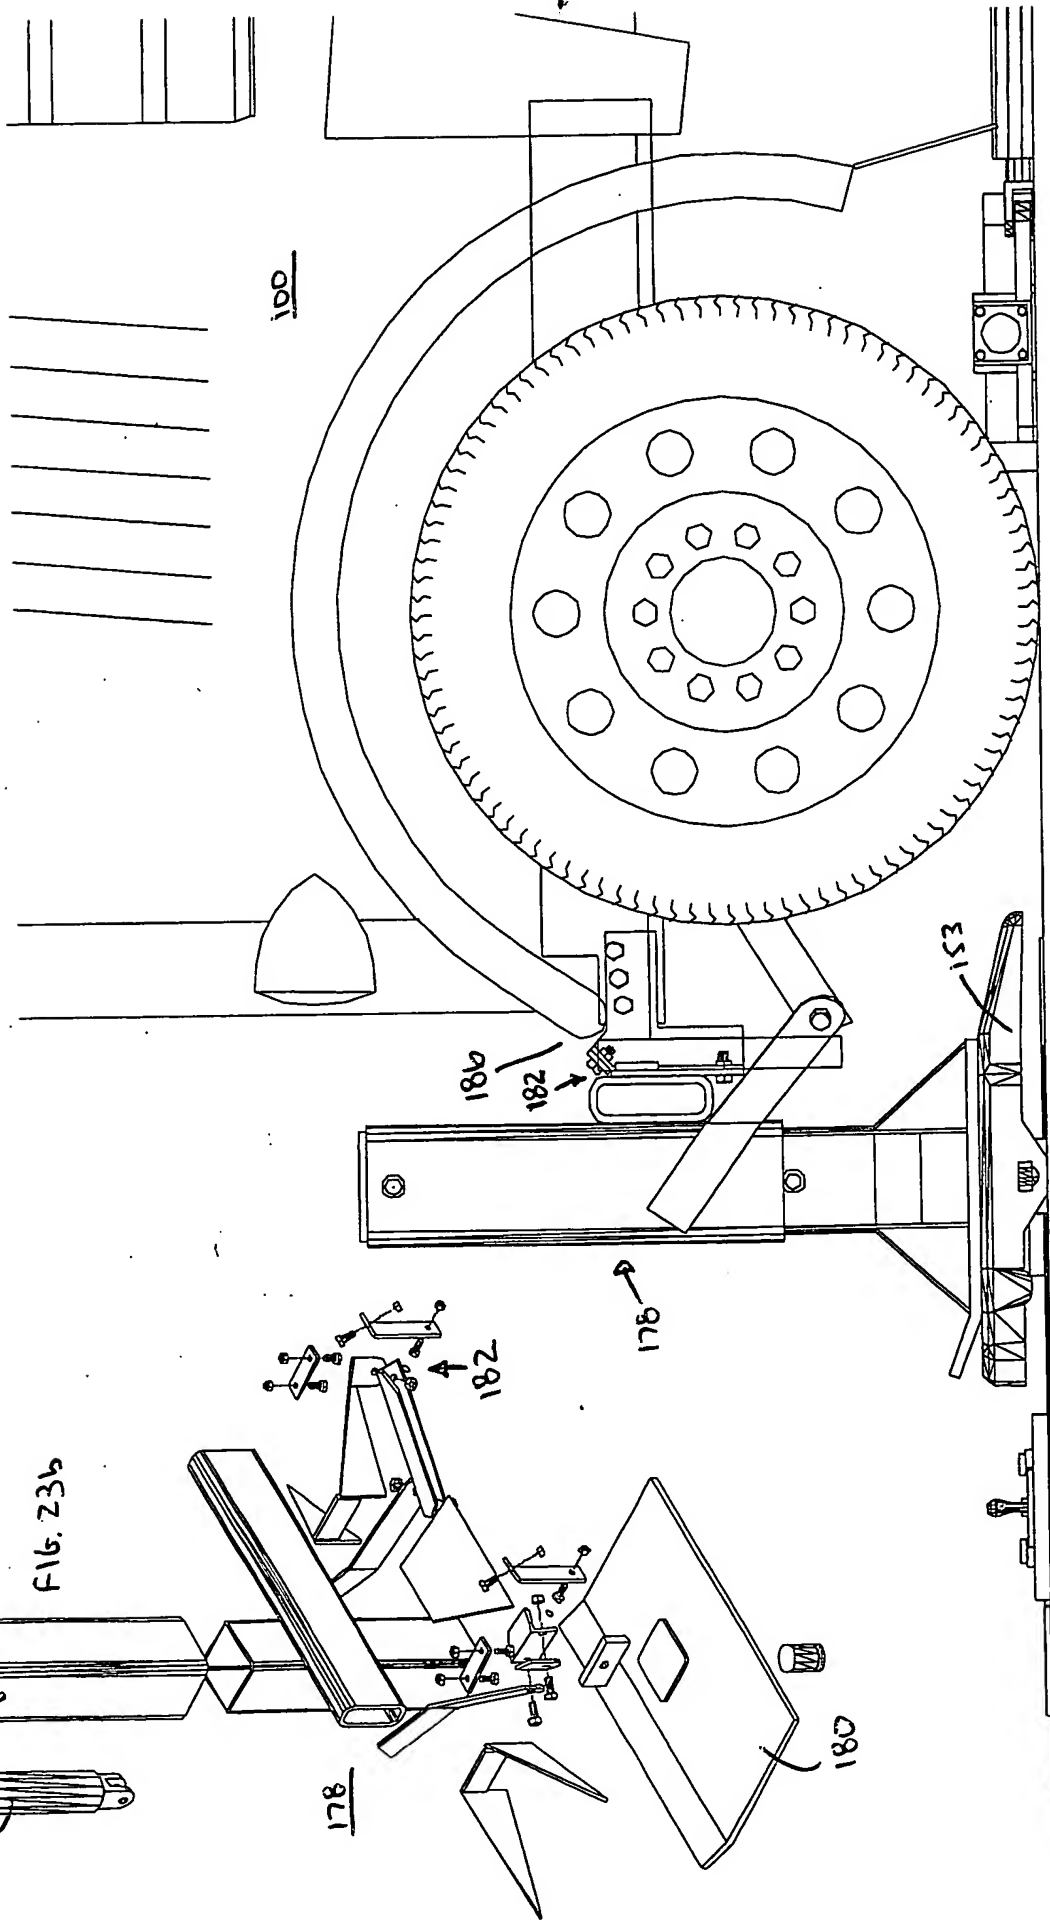


FIG. 23b

